

3512B GEN SET ENGINE

Engine Serial Number - 6WN (Build Date - 18/11/1999, Test Date - 19/11/1999, Ship Date - 30/11/1999)

[View Latest Kit Information](#)

ENGINE - ENTIRE GROUP (6WN)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
<input type="checkbox"/>		I	KW01500	F	001	1500 EKW W/FAN
<input type="checkbox"/>		I	512DE76	F	001	3512B 1500 EKW 60 HZ - LO BSFC
<input type="checkbox"/>		I	EMCENGU	F	001	ENGLISH DISPLAY UNITS
<input type="checkbox"/>		I	EMCAM07	F	001	ALARM MODULE - NFPA 110
<input type="checkbox"/>		I	EMCPLAR	F	001	PANEL LIGHTS/AUXILIARY RELAY
<input type="checkbox"/>		I	CLSSTND	F	001	COOLANT LOSS SENSING
<input type="checkbox"/>		I	ALSLSM1	F	001	LOAD SHARE MODULE
<input type="checkbox"/>		I	GENCON1	F	001	GENERATOR CONVERSION
<input type="checkbox"/>		I	CLS0009	F	001	COOLANT LEVEL SENSOR
<input type="checkbox"/>		I	VIBIS05	F	001	VIBRATION ISOLATORS
<input type="checkbox"/>		I	VIBIS07	F	001	VIBRATION ISOLATORS - RADIATOR
<input type="checkbox"/>		I	EXCYA03	F	001	Y ADAPTER
<input type="checkbox"/>		I	ACT0005	F	001	ANTIFREEZE
<input type="checkbox"/>		I	FPPRH02	F	001	FUEL PRIMING PUMP, RH MOUNTED
<input type="checkbox"/>		I	FULCOL2	F	001	FUEL COOLER
<input type="checkbox"/>		I	FUMDIS4	F	001	FUMES DISPOSAL
<input type="checkbox"/>		I	OPADRN4	F	001	OIL PAN DRAIN VALVE
<input type="checkbox"/>		I	LUBOIL1	F	001	LUBRICATING OIL
<input type="checkbox"/>		I	JWHD001	F	001	JACKET WATER HEATER - DUAL
<input type="checkbox"/>		I	ELSDLH3	F	001	ELEC START MTR LH DUAL 24V
<input type="checkbox"/>		I	BAT2417	F	001	24 VOLT BATTERY SET - DRY
<input type="checkbox"/>		I	BTRCBL1	F	001	BATTERY CABLES
<input type="checkbox"/>		I	BTR0001	F	001	BATTERY RACK
<input type="checkbox"/>		I	ALT2442	F	001	CHARGING ALTERNATOR 24V 35 AMP
<input type="checkbox"/>		I	CBK0039	F	001	CIRCUIT BKR W/ST 3 POLE 2500 A

	I	CBS3P03	F	001	AUXILIARY SWITCH	
	I	EMCPLUS	F	001	EMCP TWO PLUS	
	I	60H-0480	F	001	60HZ 480 VOLTS	
	I	LOWBSFC	F	001	LO BSFC	
	I	60HERTZ	F	001	60 HERTZ	
	I	STANDBY	F	001	STANDBY POWER APPLICATION	
	I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL	
	I	3512B	F	001	3512B DIESEL ENGINE.	
					<b>PART NUMBERS</b>	
	I	PP3562	07	001	2172 BHP 1545 GEN KW WOF 60 HZ	
	I	LA2123	02	001	3512B 1500 EKW 60 HZ - LO BSFC	
	<a href="#">NPR</a>	IY <a href="#">128-2846</a>	03	001	ENGINE AR	
	I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500	
	I	3L-0432		001	TEST - PKG GEN SET (EMCP II	
	<a href="#">NPR</a>	IY <a href="#">4P-0558</a>	00	001	AIR CLEANER GP	
	I	5N-9582		001	LOW BSFC - 3500B SERIES.	
	I	5P-2506	00	001	LITERATURE GP	
	<a href="#">NPR</a>	IY <a href="#">7C-1664</a>	07	001	DRIVE GP-FAN	
	<a href="#">NPR</a>	I	7C-2459	02	001	GUARD GP-BELT
	<a href="#">NPR</a>	IY <a href="#">7N-6782</a>	08	001	INDICATOR GP-AIR FILTER CHANGE	
	<a href="#">NPR</a>	IY <a href="#">7W-5224</a>	00	001	PULLEY GP-FAN DRIVE	
	<a href="#">NPR</a>	IY <a href="#">7W-5639</a>	02	001	FAN GP-BLOWER	
	<a href="#">NPR</a>	IY <a href="#">7W-6669</a>	01	001	GUARD GP-DAMPER	
	<a href="#">NPR</a>	IY <a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER	
	<a href="#">NPR</a>	IY <a href="#">9Y-6676</a>	04	001	RADIATOR GP	
	<a href="#">NPR</a>	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY <a href="#">113-1592</a>	03	001	MOUNTING GP-AIR CLEANER	
	<a href="#">NPR</a>	I	115-7033	00	001	RAIL GP-ENGINE & GEN SUPPORT
	<a href="#">NPR</a>	IY <a href="#">121-4450</a>	09	001	PANEL GP-CONTROL	
	<a href="#">NPR</a>	IY <a href="#">121-8856</a>	06	001	CONNECTION GP-ELECTRICAL	
	<a href="#">NPR</a>	IY <a href="#">126-9191</a>	02	001	GROUND GP-ELECTRICAL	
	<a href="#">NPR</a>	IY <a href="#">134-0056</a>	04	001	WIRING GP-ENGINE	
	<a href="#">NPR</a>	I	141-1808	01	001	BOX GP-GENERATOR CONNECTION
	<a href="#">NPR</a>	I	144-1668	03	001	GENERATOR AR
	<a href="#">NPR</a>	I	153-0191	02	001	INSTALLATION AR-GENERATOR
		I	121-4713	00	001	INSTRUCTIONS

	<a href="#">NPR</a>	IY	<a href="#">121-4717</a>	01	001	MODULE GP-ALARM
	<a href="#">NPR</a>	IY	<a href="#">121-4712</a>	01	001	PANEL GP-ELECTRONIC
		I	139-1129	00	001	COOLANT LOSS SENSING
		I	LA0498	06	001	LOAD SHARE MODULE
	<a href="#">NPR</a>	IY	<a href="#">149-6326</a>	02	001	GOVERNOR GP-ELECTRONIC
		I	LA1969	03	001	GENERATOR CONVERSION
	<a href="#">NPR</a>	I	154-6022	00	001	CONVERSION GP-GENERATOR
		I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
	<a href="#">NPR</a>	I	121-6202	06	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	I	145-5138	00	001	WIRING GP-ELECTRONIC CONTROL
	<a href="#">NPR</a>	IY	<a href="#">121-3364</a>	00	001	SENSOR & MTG GP-RADIATOR
	<a href="#">NPR</a>	I	5N-8877	04	001	MOUNTING GP-ENGINE FLEXIBLE
	<a href="#">NPR</a>	IY	<a href="#">9Y-8234</a>	03	001	MOUNTING GP-RADIATOR
		I	LA0960	04	001	Y ADAPTER
	<a href="#">NPR</a>	IY	<a href="#">5N-2457</a>	03	001	FITTING GP-EXHAUST
	<a href="#">NPR</a>	IY	<a href="#">124-0108</a>	00	001	FLANGE GP-EXHAUST
		I	PA3948	04	001	ANTIFREEZE
	<a href="#">NPR</a>	I	2P-9868	04	001	ANTIFREEZE
		I	5N-3701		001	**FACTORY NOTE**
		I	LA3236	00	001	FUEL PRIMING PUMP AR-RH
	<a href="#">NPR</a>	IY	<a href="#">124-3187</a>	04	001	LINES GP-FUEL PRIMING
	<a href="#">NPR</a>	IY	<a href="#">165-9154</a>	02	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY	<a href="#">7E-6681</a>	03	001	COOLER GP-FUEL
		I	LA1060	05	001	FUMES DISPOSAL
	<a href="#">NPR</a>	IY	<a href="#">9Y-5563</a>	00	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">120-9818</a>	04	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">9Y-7876</a>	01	001	DRAIN GP-ENGINE OIL
		I	PA5311	05	001	LUBRICATING OIL
	<a href="#">NPR</a>	I	5P-2586	03	001	OIL
		I	PA4358	07	001	JACKET WATER HEATER - DUAL
	<a href="#">NPR</a>	IY	<a href="#">7E-6247</a>	03	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY	<a href="#">6I-1041</a>	04	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	IY	<a href="#">6I-1042</a>	06	001	MOUNTING GP-JACKET WTR HEATER
		I	PA2478	06	001	ELECTRIC STARTING MOTOR LH
	<a href="#">NPR</a>	IY	<a href="#">8N-3896</a>	13	001	STARTING MOTOR GP-ELECTRIC
		I	PA1787	09	001	24 VOLT BATTERY SET - DRY

<a href="#">NPR</a>	I	7L-7872	08	001	BATTERY GP
<a href="#">NPR</a>	IY	<a href="#">7W-0825</a>	01	001	CABLE GP-BATTERY
<a href="#">NPR</a>	IY	<a href="#">3N-7056</a>	00	001	SUPPORT GP-BATTERY
	I	LA0427	08	001	CHARGING ALTERNATOR 24V 35AMP
<a href="#">NPR</a>	IY	<a href="#">7C-4803</a>	02	001	ALTERNATOR GP-CHARGING
<a href="#">NPR</a>	IY	<a href="#">7E-4836</a>	04	001	MOUNTING GP-ALTERNATOR
<a href="#">NPR</a>	IY	<a href="#">7W-5780</a>	04	001	GUARD GP-BELT
<a href="#">NPR</a>	IY	<a href="#">107-7361</a>	01	001	DRIVE GP-ACCESSORY
<a href="#">NPR</a>	I	133-6468	01	001	WIRE AS-GROUND
	I	LA0467	01	001	CIRCUIT BKR W/ST 2500 A
<a href="#">NPR</a>	I	105-7928	02	001	CIRCUIT BREAKER GP
<a href="#">NPR</a>	I	122-0317	02	001	PANEL AS-BOX
<a href="#">NPR</a>	I	122-0319	03	001	MOUNTING GP-CIRCUIT BREAKER
<a href="#">NPR</a>	I	122-0320	01	001	WIRING GP-GENERATOR
<a href="#">NPR</a>	I	122-0331	02	001	CONNECTION GP-TERMINAL STRIP
<a href="#">NPR</a>	I	105-7932	01	001	SWITCH AS-AUXILIARY
	IY	<a href="#">158-6167</a>	03	001	CONVERSION AR
	I	5N-9597		001	VOLTAGE INDICATOR - 480 VOLT
	I	PP3562	07	001	2172 BHP 1545 GEN KW WOF 60 HZ
	I	2T-8373	00	001	1620 KW @ 1800 RPM (2172 BHP)
	I	0P-8910		001	IX96-703_ POST SALE SPAR
					<b>SHIPPED LOOSE</b>
<a href="#">NPR</a>	S	0S-1571		016	BOLT
<a href="#">NPR</a>	S	0S-1588		016	BOLT
<a href="#">NPR</a>	S	0S-1590		016	BOLT
<a href="#">NPR</a>	S	1B-5357		012	NUT-FULL
<a href="#">NPR</a>	S	2N-8928		008	CLIP
<a href="#">NPR</a>	S	2V-7397		002	CABLE AS
<a href="#">NPR</a>	S	2W-7755		001	FLANGE-EXHAUST
<a href="#">NPR</a>	S	3K-1715		001	CABLE AS
<a href="#">NPR</a>	S	3N-7054		001	SUPPORT AS-BATTERY
<a href="#">NPR</a>	S	3N-7055		001	BOARD
<a href="#">NPR</a>	S	3V-3308		016	WASHER-HARD
<a href="#">NPR</a>	S	3V-6785		001	CABLE AS
<a href="#">NPR</a>	S	5L-3773		002	GASKET-EXHAUST ELBOW
<a href="#">NPR</a>	S	5L-6297		002	ADAPTER AS-FLEXIBLE

	<a href="#">NPR</a>	S	5M-2894	016	WASHER-HARD
	<a href="#">NPR</a>	S	5P-0597	002	CLAMP-HOSE
	<a href="#">NPR</a>	S	5P-1472	580	HOSE
	<a href="#">NPR</a>	S	5P-7197	008	WASHER
	<a href="#">NPR</a>	S	5P-8245	024	WASHER-HARD
	<a href="#">NPR</a>	S	7N-5274	001	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	8L-8413	004	STRAP-CABLE
	<a href="#">NPR</a>	S	8N-0869	001	COVER-TERMINAL
	<a href="#">NPR</a>	S	8N-1663	002	BOOT
	<a href="#">NPR</a>	S	8N-1725	001	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-0003	004	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-0004	004	COVER AS-TERMINAL
	<a href="#">NPR</a>	S	9G-8909	001	COVER-TERMINAL
	<a href="#">NPR</a>	S	9S-8752	016	NUT-FULL
	<a href="#">NPR</a>	S	9X-8873	012	BOLT
	<a href="#">NPR</a>	S	9X-9730	004	BATTERY GP
	<a href="#">NPR</a>	S	111-5822	001	GASKET-EXHAUST
	<a href="#">NPR</a>	S	124-0107	001	ADAPTER AS
	<a href="#">NPR</a>	S	153-3864	008	MOUNT AS
	<a href="#">NPR</a>	S	153-3865	002	MOUNT AS
	<a href="#">NPR</a>	S	171-6719	001	KIT-PARTS
	<a href="#">NPR</a>	SY	<a href="#">171-6721</a>	001	KIT-PARTS
		S	SEBP2443	001	PTSBK
		S	SEBU6251	001	LUBE 1632-16 (A)
		S	SEBU6916	001	OMM
		S	SEBU6984	001	SUPP 140013B1(A)
		S	SELF5260	001	NEW WARRANTY 1630-17 (A)
		S	SELS0086	001	S.I.
		S	ESO	001	(PRNT ESO COPY)
		S	PML	001	*REQUIRED DECALS

Key: