

Engine Serial Number - SYC01590 (Build Date - 15/06/2007, Test Date - 21/06/2007, Ship Date - unknown)

[View Latest Kit Information](#)

ENGINE - ENTIRE GROUP (SYC01590)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	C32DE06	F	001	C32, 60HZ, 1800RPM PGS 06
		I	OGNPMK4	F	001	GEN 693 FRAME PM 2 BRG K4
		I	RPA0150	F	001	692/2B FRAME GEN REML RPA0150
		I	ULLIST	F	001	UL 2200 LISTED PACKAGE GEN SET
		I	PANLGTS	F	001	PANEL LIGHTS
		I	CT20006	F	001	CURRENT TRANSF., 2000:5 RATIO
		I	ACLDE15	F	001	AIR CLEANER - DUAL ELEMENT
		I	ELSM248	F	001	STARTING MOTORS - HEAVY DUTY
		I	BAT2416	F	001	OVERSIZE BATTERY
		I	BATRM03	F	001	STANDARD BATTERY REMOVAL
		I	BTC2416	F	001	CHARGING ALTERNATOR-45AMP
		I	JWHWP08	F	001	JWH WITH PUMP 208/240V
		I	NGRDCNN	F	001	NGRDCNN
		I	BOTCBLR	F	001	BOTTOM CBL ENTRY NO SHROUD STD
		I	EXHMTG1	F	001	MAN AND TURBO GUARDS 01
		I	AUXPNLL	F	001	AUXILIARY PLATE MOUNTING - LH
		I	BUSBL6S	F	001	5000A LV BUS BARS RH(NEMA) STD
		I	CERTIFD	F	001	EPA & CARB NON-ROAD EMIS. CERT
		I	CUSTCNR	F	001	CUSTOMER CONNECTION MTG RH STD
		I	EMCP32	F	001	EMCP 3.2 CONTROL PANEL
		I	NOENCPB	F	001	NO ENCLOSURE REAR (STANDARD)
		I	NOENCPL	F	001	NO ENCLOSURE LEFT (STANDARD)
		I	UIPBBHS	F	001	CONTROL PANEL MOUNT REAR (STD)
		I	60H-0480	F	001	60HZ 480 VOLTS
		I	MSEPGGN	F	001	GENERAL EPG

	I	TRSGEN7	F	001	PGS TEST REPORT @ 0.8 PF	
	I	MSCEC72	F	001	COMMERCIAL BUSINESSES	
	I	MWCODEF	F	001	STANDBY POWER	
	I	LANENGO	F	001	ENGLISH LANGUAGE OPTION	
	I	CERTMOB	F	001	MOBILE APPLICATION USE	
	I	CERTUSA	F	001	END USER LOCATION DESCRIPTION	
	I	KW01000	F	001	1000 EKW W/FAN	
	I	STANDBY	F	001	STANDBY POWER APPLICATION	
					<b>PART NUMBERS</b>	
	I	GP0621	13	001	C32 1000SC PKG	
	IY	<a href="#">253-7904</a>	02	001	GENERAL AR	
	<a href="#">NPR</a>	IY	<a href="#">253-7557</a>	16	001	ENGINE AR-COMplete
	<a href="#">NPR</a>	IY	<a href="#">205-7860</a>	08	001	FILM GP
		I	3L-0284		001	*****TEST - PKG GEN SET*****
	<a href="#">NPR</a>	IY	<a href="#">260-0892</a>	08	001	INSTALLATION AR-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">271-8138</a>	03	001	ADAPTER GP-GENERATOR COUPLING
		I	3L-0467		001	TWO BEARING GEN ALIGNMENT-3500
		I	252-7405	00	001	***** TEST - GEN ELE SYS LE *
	<a href="#">NPR</a>	IY	<a href="#">279-0735</a>	00	001	CABLE GP-BATTERY
	<a href="#">NPR</a>	IY	<a href="#">245-0000</a>	02	001	BOX GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">245-0095</a>	01	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">245-0082</a>	01	001	CONTROL GP-GENERATOR SET
	<a href="#">NPR</a>	IY	<a href="#">252-7367</a>	01	003	MOUNTING GP-PANEL
	<a href="#">NPR</a>	IY	<a href="#">252-7409</a>	01	001	FASTENER GP-WIRING HARNESS
	<a href="#">NPR</a>	IY	<a href="#">245-0003</a>	05	001	BOX GP-EXTENSION TERMINAL
	<a href="#">NPR</a>	IY	<a href="#">269-7013</a>	02	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">252-7343</a>	02	001	BUS BAR GP-BOX
	<a href="#">NPR</a>	IY	<a href="#">245-0087</a>	05	001	MOUNTING GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">252-7372</a>	01	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">252-7418</a>	03	001	WIRING GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">252-7556</a>	00	002	COVER GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">260-6666</a>	04	001	CONNECTION GP-GENERATOR LEADS
	<a href="#">NPR</a>	IY	<a href="#">252-7411</a>	09	001	GROUND GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">245-0001</a>	00	001	COVER GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">245-0013</a>	01	001	COVER GP-GENERATOR
	<a href="#">NPR</a>	IY	<a href="#">245-0007</a>	01	002	COVER GP-GENERATOR

	<a href="#">NPR</a>	IY	<a href="#">245-0023</a>	01	001	COVER GP-CONTROL PANEL
	<a href="#">NPR</a>	IY	<a href="#">245-0027</a>	03	001	COVER GP-ENCLOSURE
	<a href="#">NPR</a>	IY	<a href="#">245-0096</a>	00	001	COVER GP-EXTENSION BOX
	<a href="#">NPR</a>	IY	<a href="#">245-0025</a>	00	001	COVER GP-EXTENSION BOX
	<a href="#">NPR</a>	IY	<a href="#">245-0024</a>	00	001	COVER GP-ENCLOSURE
		I	252-7392	00	001	INSTRUCTIONS
		I	252-7394	00	001	INSTRUCTIONS
		I	252-7396	02	001	INSTRUCTIONS-GOV
		I	252-7400	01	001	NOTE-BUSS BAR MOUNTING
	<a href="#">NPR</a>	IY	<a href="#">255-3436</a>	11	001	RADIATOR GP
	<a href="#">NPR</a>	I	101-2844	04	029	COOLANT-EXTENDED LIFE
	<a href="#">NPR</a>	IY	<a href="#">270-0453</a>	07	001	LINES GP-AIR
	<a href="#">NPR</a>	IY	<a href="#">261-0653</a>	07	001	LINES GP-COOLANT
	<a href="#">NPR</a>	IY	<a href="#">271-3843</a>	02	001	LINES GP-ENGINE OIL DRAIN
	<a href="#">NPR</a>	IY	<a href="#">271-3840</a>	07	001	LINES GP-FUEL
	<a href="#">NPR</a>	IY	<a href="#">271-3845</a>	03	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">267-3346</a>	05	001	BASE GP-ENGINE & GENERATOR
	<a href="#">NPR</a>	SY	<a href="#">256-3167</a>	03	001	MOUNTING GP-ENGINE FLEXIBLE
		S	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	IY	<a href="#">275-0030</a>	00	001	COVER GP-ENGINE LIFTING EYE
	<a href="#">NPR</a>	IY	<a href="#">275-0032</a>	00	001	COVER GP-ENGINE LIFTING EYE
	<a href="#">NPR</a>	IY	<a href="#">256-9937</a>	01	001	FAN GP-BLOWER
	<a href="#">NPR</a>	IY	<a href="#">270-1480</a>	00	001	RAIL GP-SLIDE
	<a href="#">NPR</a>	IY	<a href="#">121-3364</a>	04	001	SENSOR & MTG GP-RADIATOR
	<a href="#">NPR</a>	IY	<a href="#">263-1745</a>	02	001	WIRING GP-BOX
	<a href="#">NPR</a>	IY	<a href="#">252-7438</a>	03	001	PLUG GP-BOX
	<a href="#">NPR</a>	IY	<a href="#">281-2747</a>	00	001	HARNESS GP
	<a href="#">NPR</a>	SY	<a href="#">256-3170</a>	01	001	MOUNTING GP-VIBRATION ISOLATOR
	<a href="#">NPR</a>	IY	<a href="#">269-4149</a>	03	001	DRIVE GP-FAN
	<a href="#">NPR</a>	IY	<a href="#">295-6926</a>	00	001	SUPPORT GP-BATTERY
	<a href="#">NPR</a>	IY	<a href="#">287-0380</a>	02	001	MOUNTING GP-AIR CLEANER
		I	GC4773	00	001	GLOBAL-1000 GENERATOR 693/2
	<a href="#">NPR</a>	IY	<a href="#">262-8094</a>	00	001	GENERATOR AR
		I	GC4775	00	001	1000SC GENERATOR REMOVAL
		I	LE0222	04	001	UL-2200 FOR ALL 3500
		I	3L-0028		001	NAMEPLATE

	I	3L-0043		001	GSC + SETPOINT INFORMATION-UL
	I	GZ0698	01	001	EMCP3.2 COMMON ENGINE INTERFAC
	<a href="#">NPR</a>	IY <a href="#">283-0010</a>	02	001	CONTROL GP-EMCP ELECTRONIC
	<a href="#">NPR</a>	I 254-6314	05	001	ELECTRONICS GP-GENERATOR SET
	<a href="#">NPR</a>	IY <a href="#">263-1744</a>	05	001	BOX GP-ELECTRONIC
	I	244-9655	01	001	INSTRUCTIONS
	I	GC2991	01	001	PANEL LIGHTS
	<a href="#">NPR</a>	IY <a href="#">269-7022</a>	00	001	LIGHTING GP-GENERATOR
	I	GC2900	00	001	Mounting Gp-CT (2000:5)
	<a href="#">NPR</a>	IY <a href="#">252-7329</a>	03	001	TRANSFORMER GP-CURRENT
	I	GP0622	02	001	AIR CLEANER-DUAL ELEMENT
	<a href="#">NPR</a>	IY <a href="#">273-6002</a>	06	001	LINES GP-AIR
	I	GP0939	01	001	ELECTRIC STARTING MOTOR-HEAVY
	<a href="#">NPR</a>	IY <a href="#">261-3291</a>	00	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY <a href="#">260-9520</a>	01	001	WIRING GP-ELECTRIC STARTING
	<a href="#">NPR</a>	IY <a href="#">280-7395</a>	02	001	COVER GP-ENGINE
	<a href="#">NPR</a>	ILY <a href="#">268-3890</a>	03	001	COVER GP-ACCESS
	I	GP0646	05	001	STARTING SYSTEM
	<a href="#">NPR</a>	IY <a href="#">295-8951</a>	00	001	BATTERY GP
	I	GP0640	04	001	BATTERY REMOVAL
	I	GP0642	01	001	CHARGING ALTERNATOR-45 AMP
	<a href="#">NPR</a>	IY <a href="#">255-3438</a>	05	001	GUARD GP-BELT
	<a href="#">NPR</a>	IRY <a href="#">5N-5692</a>	12	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	IY <a href="#">260-9522</a>	03	001	WIRING GP-ELECTRONIC CONTROL
	<a href="#">NPR</a>	IY <a href="#">303-6241</a>	00	001	MOUNTING GP-ALTERNATOR
	I	GP0636	02	001	JW HEATER, 9kW, 240/227V
	<a href="#">NPR</a>	IY <a href="#">275-9901</a>	05	001	WIRING GP-JACKET WATER HEATER
	<a href="#">NPR</a>	IY <a href="#">292-2540</a>	03	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY <a href="#">274-5581</a>	01	001	CABLE GP-GENERATOR GROUND
	I	GC2501	01	001	BOTTOM CBL ENTRY NO SHROUD STD
	I	252-7502	04	001	INSTRUCTIONS
	I	GP0918	02	001	HEAT SHIELDS - C32
	<a href="#">NPR</a>	IY <a href="#">278-4176</a>	00	001	SHIELD GP-HEAT
	<a href="#">NPR</a>	IY <a href="#">286-5296</a>	02	001	SHIELD GP
	I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
	I	0V-1065		001	END USE: GENERAL EPG

	I	0P-1793		001	***GEN SET TEST CHG @ 0.8 PF**
	I	PP5508	00	001	1502 BHP 1042 GEN KW WOF 60 HZ
	I	0K-6255	00	001	1120 BKW (1502 BHP) @ 1800 RPM
	I	CA0866	07	001	LANGUAGE MARKINGS-ENGLISH <b>SHIPPED LOOSE</b>
	S			006	PACK IN CARTON ONLY INFO(A)
	S	ESO		001	(PRNT ESO COPY)
	S	PML		001	*REQUIRED DECALS
	SY	<a href="#">6L-4502</a>		001	CHART-PLATE & FILM
<a href="#">NPR</a>	S	8T-4121		006	WASHER-HARD
<a href="#">NPR</a>	S	8T-4131		006	NUT
<a href="#">NPR</a>	S	8T-4133		002	NUT
<a href="#">NPR</a>	S	8T-4136		002	BOLT
<a href="#">NPR</a>	S	8T-4191		002	BOLT
<a href="#">NPR</a>	S	164-8955		001	PLATE
<a href="#">NPR</a>	S	168-7790		006	BOLT
<a href="#">NPR</a>	S	177-1452		006	WASHER-HARD
<a href="#">NPR</a>	S	204-1070		005	CLIP
<a href="#">NPR</a>	S	209-4581		001	CLAMP
<a href="#">NPR</a>	SY	<a href="#">256-3167</a>		001	MOUNTING GP-ENGINE FLEXIBLE
<a href="#">NPR</a>	SY	<a href="#">256-3170</a>		001	MOUNTING GP-VIBRATION ISOLATOR
	S	259-2174		006	MOUNT-ISOLATION
<a href="#">NPR</a>	SY	<a href="#">271-3845</a>		001	FUMES DISPOSAL GP
<a href="#">NPR</a>	S	286-0723		001	HOSE
	S	SEBP4326		001	PTSBK
	S	SEBU6251		001	LUBE 140019B2(A)
	S	SEBU8088		001	OMM
	S	SELF5405		001	WARRANTY
	S	SERP4326		001	PTSCD

Key: