

3512B GEN SET ENGINE

Engine Serial Number - 6WN00439 (Build Date - 10/11/1999, Test Date - 12/11/1999, Ship Date - 06/12/1999)

[View Latest Kit Information](#)

ENGINE - ENTIRE GROUP (6WN00439)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						FEATURE CODES
<input type="checkbox"/>		I	KW01500	F	001	1500 EKW W/FAN
<input type="checkbox"/>		I	512DE76	F	001	3512B 1500 EKW 60 HZ - LO BSFC
<input type="checkbox"/>		I	EMCENGU	F	001	ENGLISH DISPLAY UNITS
<input type="checkbox"/>		I	EMCAM06	F	001	ALARM MODULE - NFPA 99
<input type="checkbox"/>		I	EMCEFR1	F	001	RELAY GP
<input type="checkbox"/>		I	CLSSTND	F	001	COOLANT LOSS SENSING
<input type="checkbox"/>		I	EMCPLAR	F	001	PANEL LIGHTS/AUXILIARY RELAY
<input type="checkbox"/>		I	EMCRMP5	F	001	REM. ANNUNCIATOR MODULE
<input type="checkbox"/>		I	CLS0009	F	001	COOLANT LEVEL SENSOR
<input type="checkbox"/>		I	VIBIS05	F	001	VIBRATION ISOLATORS
<input type="checkbox"/>		I	VIBIS07	F	001	VIBRATION ISOLATORS - RADIATOR
<input type="checkbox"/>		I	MUFCRG0	F	001	CRITICAL GRADE MUFFLER
<input type="checkbox"/>		I	ACT0005	F	001	ANTIFREEZE
<input type="checkbox"/>		I	FPPRH02	F	001	FUEL PRIMING PUMP, RH MOUNTED
<input type="checkbox"/>		I	FLN0001	F	001	FLEXIBLE FUEL LINES
<input type="checkbox"/>		I	FULCOL2	F	001	FUEL COOLER
<input type="checkbox"/>		I	FUMDIS4	F	001	FUMES DISPOSAL
<input type="checkbox"/>		I	OPADR4	F	001	OIL PAN DRAIN VALVE
<input type="checkbox"/>		I	LUBOIL1	F	001	LUBRICATING OIL
<input type="checkbox"/>		I	JWHD002	F	001	JACKET WATER HEATER - DUAL
<input type="checkbox"/>		I	LWS0001	F	001	LOW WATER TEMPERATURE SWITCH
<input type="checkbox"/>		I	BTRCBL1	F	001	BATTERY CABLES
<input type="checkbox"/>		I	BTR0001	F	001	BATTERY RACK
<input type="checkbox"/>		I	BTC1006	F	001	BATTERY CHARGER 10 AMP
<input type="checkbox"/>		I	ALT2442	F	001	CHARGING ALTERNATOR 24V 35 AMP

	I	CBK0039	F	001	CIRCUIT BKR W/ST 3 POLE 2500 A
	I	60H-0480	F	001	60HZ 480 VOLTS
	I	LITENGE	F	002	EXTRA ENGLISH LITERATURE
	I	TRSGEN7	F	001	GEN SET TEST CHG AT 0.8 PF
	I	3512B	F	001	3512B DIESEL ENGINE.
	I	LOWBSFC	F	001	LO BSFC
	I	60HERTZ	F	001	60 HERTZ
	I	STANDBY	F	001	STANDBY POWER APPLICATION
	I	EMCPTWO	F	001	ELECTRONIC MODULAR CONTROL PNL
	I	XLLENGL	F	001	EXTRA ENGLISH LITERATURE
					PART NUMBERS
	I	PP3562	07	001	2172 BHP 1545 GEN KW WOF 60 HZ
	I	177-1857	01	001	DIAGRAM-WIRING (GROUND FAULT)
	I	183-7527	00	001	TRANSFORMER/CURRENT (2500/5A)
	I	160-0000	00	002	MOUNTING GP-MUFFLER
	I	159-9948	01	001	MUFFLER GP
	I	185-3621	00	001	ENCLOSURE GP-GENERATOR
	I	0P-8707		001	_____QUOTE NO.
	I	0P-8910		001	IX96-703_ POST SALE SPAR
	I	LA2123	02	001	3512B 1500 EKW 60 HZ - LO BSFC
	<u>NPR</u>	IY 128-2846	03	001	ENGINE AR
		I		001	SINGLE BEARING GEN ALIGN-3500
		I		001	TEST - PKG GEN SET (EMCP II
	<u>NPR</u>	IY 4P-0558	00	001	AIR CLEANER GP
		I		001	LOW BSFC - 3500B SERIES.
		I		001	LITERATURE GP
	<u>NPR</u>	IY 7C-0526	01	001	STARTING MOTOR GP-ELECTRIC
	<u>NPR</u>	IY 7C-1664	07	001	DRIVE GP-FAN
	<u>NPR</u>	I		001	GUARD GP-BELT
	<u>NPR</u>	IY 7N-6782	08	001	INDICATOR GP-AIR FILTER CHANGE
	<u>NPR</u>	IY 7W-5224	00	001	PULLEY GP-FAN DRIVE
	<u>NPR</u>	IY 7W-5639	02	001	FAN GP-BLOWER
	<u>NPR</u>	IY 7W-6669	01	001	GUARD GP-DAMPER
	<u>NPR</u>	IY 8N-9639	04	001	GUARD GP-DAMPER
	<u>NPR</u>	IRY 9X-9591	01	001	CONVERTER GP-ELECTRICAL
	<u>NPR</u>	IY 9Y-6676	04	001	RADIATOR GP

	NPR	I	104-4704	03	001	MOUNTING GP-CONTROL PANEL
	NPR	IY	113-1592	03	001	MOUNTING GP-AIR CLEANER
	NPR	I	115-7033	00	001	RAIL GP-ENGINE & GEN SUPPORT
	NPR	IY	121-4450	09	001	PANEL GP-CONTROL
	NPR	I	121-6204	04	001	REGULATOR GP-VOLTAGE
	NPR	IY	121-8856	06	001	CONNECTION GP-ELECTRICAL
	NPR	IY	126-9191	02	001	GROUND GP-ELECTRICAL
	NPR	IY	134-0056	04	001	WIRING GP-ENGINE
	NPR	I	141-1808	01	001	BOX GP-GENERATOR CONNECTION
	NPR	I	144-1668	03	001	GENERATOR AR
	NPR	I	153-0191	02	001	INSTALLATION AR-GENERATOR
		I	121-4713	00	001	INSTRUCTIONS
	NPR	IY	121-4716	01	001	MODULE GP-ALARM
	NPR	I	134-1157	00	001	RELAY GP
		I	139-1129	00	001	COOLANT LOSS SENSING
	NPR	IY	121-4712	01	001	PANEL GP-ELECTRONIC
	NPR	IY	131-1965	01	001	PANEL GP-INSTRUMENT
	NPR	IY	121-3364	00	001	SENSOR & MTG GP-RADIATOR
	NPR	I	5N-8877	04	001	MOUNTING GP-ENGINE FLEXIBLE
	NPR	IY	9Y-8234	03	001	MOUNTING GP-RADIATOR
		I	LA2440	00	001	CRITICAL GRADE MUFFLER
		I	159-9949	01	001	MUFFLER GP
		I	PA3948	04	001	ANTIFREEZE
	NPR	I	2P-9868	04	001	ANTIFREEZE
		I	5N-3701		001	**FACTORY NOTE**
		I	LA3236	00	001	FUEL PRIMING PUMP AR-RH
	NPR	IY	124-3187	03	001	LINES GP-FUEL PRIMING
	NPR	IY	165-9154	02	001	PUMP GP-FUEL PRIMING
	NPR	IY	5N-2438	05	001	LINES GP-FLEXIBLE FUEL
	NPR	IY	7E-6681	03	001	COOLER GP-FUEL
		I	LA1060	05	001	FUMES DISPOSAL
	NPR	IY	9Y-5563	00	001	FUMES DISPOSAL GP
	NPR	IY	120-9818	04	001	FUMES DISPOSAL GP
	NPR	IY	9Y-7876	01	001	DRAIN GP-ENGINE OIL
		I	PA5311	05	001	LUBRICATING OIL
	NPR	I	5P-2586	03	001	OIL

	I	PA4391	08	001	JACKET WATER HEATER - DUAL
NPR	IY	6I-1041	04	001	MOUNTING GP-JACKET WTR HEATER
NPR	IY	6I-1042	06	001	MOUNTING GP-JACKET WTR HEATER
NPR	IY	7E-6248	06	001	HEATER GP-JACKET WATER
NPR	I	3E-0264	02	001	SWITCH GP-TEMPERATURE
NPR	IY	7W-0825	01	001	CABLE GP-BATTERY
NPR	IY	3N-7056	00	001	SUPPORT GP-BATTERY
NPR	I	7C-3874	02	001	BATTERY CHARGER
	I	LA0427	08	001	CHARGING ALTERNATOR 24V 35AMP
NPR	IY	7C-4803	02	001	ALTERNATOR GP-CHARGING
NPR	IY	7E-4836	04	001	MOUNTING GP-ALTERNATOR
NPR	IY	7W-5780	04	001	GUARD GP-BELT
NPR	IY	107-7361	01	001	DRIVE GP-ACCESSORY
NPR	I	133-6468	01	001	WIRE AS-GROUND
	I	LA0467	01	001	CIRCUIT BKR W/ST 2500 A
NPR	I	105-7928	02	001	CIRCUIT BREAKER GP
NPR	I	122-0317	02	001	PANEL AS-BOX
NPR	I	122-0319	03	001	MOUNTING GP-CIRCUIT BREAKER
NPR	I	122-0320	01	001	WIRING GP-GENERATOR
NPR	I	122-0331	02	001	CONNECTION GP-TERMINAL STRIP
	I	5N-9597		001	VOLTAGE INDICATOR - 480 VOLT
	I	0P-9715		002	EXTRA LITERATURE-G.S. M/AUX
	I	0P-1793		001	GEN SET TEST CHG AT 0.8 PF
	I	PP3562	07	001	2172 BHP 1545 GEN KW WOF 60 HZ
	I	2T-8373	00	001	1620 KW @ 1800 RPM (2172 BHP)
					SHIPPED LOOSE
NPR	S	0S-1571		044	BOLT
NPR	S	0S-1588		008	BOLT
NPR	S	0S-1590		024	BOLT
NPR	S	2N-8928		008	CLIP
NPR	S	3K-1715		001	CABLE AS
NPR	S	3N-6504		001	HOSE AS
NPR	S	3N-7054		001	SUPPORT AS-BATTERY
NPR	S	3N-7055		001	BOARD
NPR	S	3V-3308		108	WASHER-HARD
NPR	S	3V-6785		001	CABLE AS

	NPR	S	5F-5990	002	CLIP
	NPR	S	5L-3773	004	GASKET-EXHAUST ELBOW
	NPR	S	5L-6297	002	ADAPTER AS-FLEXIBLE
	NPR	S	5M-2894	016	WASHER-HARD
	NPR	S	5P-0597	002	CLAMP-HOSE
	NPR	S	5P-1472	580	HOSE
	NPR	S	5P-7197	008	WASHER
	NPR	S	6V-8188	028	NUT
	NPR	S	7C-3874	001	BATTERY CHARGER
	NPR	S	7N-5274	001	COVER AS-TERMINAL
	NPR	S	8N-0869	001	COVER-TERMINAL
	NPR	S	8N-1186	001	HOSE AS
	NPR	S	8N-1663	002	BOOT
	NPR	S	8N-1725	001	COVER AS-TERMINAL
	NPR	S	8T-4223	056	WASHER-HARD
	NPR	S	8T-8917	028	BOLT
	NPR	S	9G-8909	001	COVER-TERMINAL
	NPR	S	9S-8752	008	NUT-FULL
	NPR	S	111-5822	004	GASKET-EXHAUST
	NPR	S	112-4759	001	CAP-RAIN
	NPR	S	112-4766	001	PIPE AS-EXHAUST
	NPR	S	124-0107	001	ADAPTER AS
	NPR	SY	131-1965	001	PANEL GP-INSTRUMENT
	NPR	S	153-3864	008	MOUNT AS
	NPR	S	153-3865	002	MOUNT AS
	NPR	S	159-9918	001	MUFFLER
		S	159-9925	001	EXTENSION AS
		S	159-9931	001	SHIELD-RAIN
		S	159-9936	002	BRACKET AS
		S	159-9997	002	BRACKET
		S	159-9998	002	BRACKET
		S	159-9999	002	CHANNEL
		S	171-4156	001	INSTRUCTION
	NPR	S	171-6719	001	KIT-PARTS
	NPR	SY	171-6721	001	KIT-PARTS
		S	183-7527	001	TRANSFORMER/CURRENT (2500/5A)



S	185-3621	001	ENCLOSURE GP-GENERATOR
S	SEBP2443	003	PTSBK
S	SEBU6251	003	LUBE 1632-16 (A)
S	SEBU6916	003	OMM
S	SEBU6984	003	SUPP 140013B1(A)
S	SELF5260	003	NEW WARRANTY 1630-17 (A)
S	SELS0086	003	S.I.
S	ESO	001	(PRNT ESO COPY)
S	PML	001	*REQUIRED DECALS