

3516B GEN SET ENGINE

Engine Serial Number - 7RN01418 (Build Date - 19/05/2000, Test Date - 22/05/2000, Ship Date - 12/08/2000)

[View Latest Kit Information](#)

ENGINE - ENTIRE GROUP (7RN01418)

<u>Qty.</u>	<u>NPR</u>	<u>Note</u>	<u>Part No.</u>	<u>Change Level</u>	<u>Req. Qty</u>	<u>Part Name</u>
						<b>FEATURE CODES</b>
		I	KW01825	F	001	1825 EKW W/FAN
	<a href="#">NPR</a>	IY	<a href="#">146-9838</a>	F	001	PANEL GP-CONTROL
		I	LA2053	F	001	1250 GAL DW FUEL TRANSFER SYS
	<a href="#">NPR</a>	I	136-2054	F	001	MODULE GP-ALARM
	<a href="#">NPR</a>	I	121-6203	F	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	I	136-6168	F	001	PANEL AR-UTILITY
		I	193-0323	F	001	INSTRUCTION - SWGR
		I	193-4621	F	001	PANEL AR
	<a href="#">NPR</a>	IY	<a href="#">178-9030</a>	F	001	BOX AS-STORAGE
		I	179-7264	F	001	PACKAGING ARRANGEMENT
	<a href="#">NPR</a>	I	188-9427	F	001	PANEL GP-ENCLOSURE
	<a href="#">NPR</a>	I	190-0376	F	001	LINES GP-VENT
	<a href="#">NPR</a>	IY	<a href="#">115-7842</a>	F	001	FILTER GP-FUEL
		I	LA0499	F	001	OIL FILTER LH SERVICE
	<a href="#">NPR</a>	I	190-2280	F	001	SUPPORT GP-WATER LINES
	<a href="#">NPR</a>	I	188-1765	F	001	CONTAINER AR
	<a href="#">NPR</a>	IY	<a href="#">155-1390</a>	F	016	MOUNTING GP-ENGINE
	<a href="#">NPR</a>	I	192-0788	F	001	DRAIN GP-COOLANT
	<a href="#">NPR</a>	I	178-3323	F	002	BATTERY GP
	<a href="#">NPR</a>	ILY	<a href="#">61-1043</a>	F	001	MOUNTING GP-JACKET WTR HEATER
		I	516DE1C	F	001	3516B 1825 EKW 60 HZ - CERT EM
		I	RRM0057	F	001	RADIATOR REMOVAL 60CVS, 0.374
		I	SWRCN12	F	001	SWITCHGEAR CONVERSION
		I	ALT2444	F	001	CHARGING ALTERNATOR 24V 60 AMP
		I	JWHD001	F	001	JACKET WATER HEATER - DUAL

	I	CLFLCN1	F	001	FLANGED CONNECTION	
	I	LUBOIL1	F	001	LUBRICATING OIL	
	I	PRIPLUS	F	001	PRIME PLUS 10% POWER APPL.	
	I	60H-0480	F	001	60HZ 480 VOLTS	
	I	3516B	F	001	3516B DIESEL ENGINE	
	I	CERTIFD	F	001	CERTIFIED	
	I	60HERTZ	F	001	60 HERTZ	
	I	NORAD	F	001	NO RADIATOR	
					<b>PART NUMBERS</b>	
	I	LL5192	01	001	2628 BHP 1825 GEN KW W/F 60 HZ	
	<a href="#">NPR</a>	I	2P-9868	04	120	ANTIFREEZE
	<a href="#">NPR</a>	I	187-9703	01	001	RADIATOR GP
	<a href="#">NPR</a>	IY	<a href="#">140-2665</a>	00	001	FUMES DISPOSAL GP
	<a href="#">NPR</a>	IY	<a href="#">134-3159</a>	03	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	IY	<a href="#">134-3160</a>	03	001	MOUNTING GP-JACKET WTR HEATER
	<a href="#">NPR</a>	IY	<a href="#">3N-4905</a>	03	001	HOSE AS
	<a href="#">NPR</a>	IY	<a href="#">7W-9704</a>	05	001	PUMP GP-SUMP
	<a href="#">NPR</a>	IY	<a href="#">183-1201</a>	00	001	MUFFLER GP
		I	187-9756	01	001	LOUVER GP
	<a href="#">NPR</a>	IY	<a href="#">153-0180</a>	00	001	VENT GP-FUEL TANK
	<a href="#">NPR</a>	I	152-2876	02	001	HARNESS AS-WIRING
	<a href="#">NPR</a>	IY	<a href="#">151-5673</a>	01	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	I	141-6413	00	001	RAIL GP-SLIDE
	<a href="#">NPR</a>	I	149-2477	00	001	SUPPORT AS
	<a href="#">NPR</a>	IY	<a href="#">141-1598</a>	01	001	SWITCH GP-DISCONNECT
	<a href="#">NPR</a>	IY	<a href="#">164-4580</a>	01	001	DOOR AS
		I	LA2990	00	001	UNDERCARRIAGE AR-40 FT-3 AXLE
		I	9Y-1385	02	001	UNDERCARRIAGE AR
	<a href="#">NPR</a>	IY	<a href="#">9Y-1392</a>	02	001	JACK
	<a href="#">NPR</a>	IY	<a href="#">151-5714</a>	00	001	LADDER GP
	<a href="#">NPR</a>	IY	<a href="#">156-9155</a>	01	001	HANDLE AS
	<a href="#">NPR</a>	IY	<a href="#">113-1217</a>	00	001	DOOR AS
	<a href="#">NPR</a>	I	102-6845	02	001	TANK GP-ENGINE OIL
		I	102-6848	00	001	ALARM GP-LOW OIL LEVEL
	<a href="#">NPR</a>	IY	<a href="#">147-5690</a>	02	001	TANK GP-FUEL
	<a href="#">NPR</a>	IY	<a href="#">146-9839</a>	07	001	PANEL GP-CONTROL

		I	LA1824	00	001	1250 GAL DOUBLE WALL FUEL TANK
	<a href="#">NPR</a>	I	147-1165	08	001	SWITCHGEAR AR
	<a href="#">NPR</a>	I	135-3319	03	001	BATTERY CHARGER GP
	<a href="#">NPR</a>	I	153-7726	02	001	CONTROL GP-LOAD SHARE MODULE
	<a href="#">NPR</a>	I	125-9326	01	003	TRANSFORMER GP-POTENTIAL
	<a href="#">NPR</a>	I	170-6481	00	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	IY	<a href="#">130-5653</a>	03	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	I	131-2960	02	001	RELAY GP
	<a href="#">NPR</a>	I	149-8779	02	001	HEATER GP-SPACE
		I	179-2318	00	001	HARNESS AS
	<a href="#">NPR</a>	I	154-2518	01	001	CONTROL GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	I	131-0486	00	001	PANEL AR-MONITOR
	<a href="#">NPR</a>	I	131-0487	03	001	CONTROL GP-EMCP ELECTRONIC
	<a href="#">NPR</a>	I	131-2837	03	001	PANEL GP-CONTROL
	<a href="#">NPR</a>	I	136-4703	00	001	MOUNTING GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	I	125-9976	00	001	RELAY GP
	<a href="#">NPR</a>	I	147-1186	01	001	CONTROL GP-CIRCUIT BREAKER
	<a href="#">NPR</a>	I	149-8781	02	001	HEATER GP-SPACE
	<a href="#">NPR</a>	I	147-1190	00	001	PARALLELING GP-AUTOMATIC
	<a href="#">NPR</a>	I	129-3164	03	001	ENCLOSURE GP-EXTENSION
	<a href="#">NPR</a>	I	131-0341	01	001	METER GP-POWER FACTOR
		I	172-5645	06	001	PANEL GP
		I	190-6718	00	001	GANEL GP (VPAP)
	<a href="#">NPR</a>	IY	<a href="#">141-7896</a>	02	001	TANK GP-FUEL
	<a href="#">NPR</a>	I	178-6325	00	001	MOUNTING GP-VIBRATION ISOLATOR
	<a href="#">NPR</a>	IY	<a href="#">5N-4659</a>	06	001	REGULATOR GP-OIL LEVEL
	<a href="#">NPR</a>	IY	<a href="#">115-1065</a>	01	001	PUMP GP-FUEL PRIMING
	<a href="#">NPR</a>	IY	<a href="#">192-4902</a>	00	001	PANEL GP-SOUND SUPPRESSION
		I	193-0590	00	001	DECALCOMANIA GP
		I	188-3222	00	001	LINES GP-WATER
	<a href="#">NPR</a>	IY	<a href="#">189-9100</a>	00	001	MOUNTING GP-RADIATOR
	<a href="#">NPR</a>	I	190-1328	00	001	BAFFLE GP-RADIATOR
	<a href="#">NPR</a>	IY	<a href="#">115-7841</a>	10	001	FILTER GP-ENGINE OIL
	<a href="#">NPR</a>	IY	<a href="#">151-9265</a>	00	001	HARNESS AS-SENSOR
	<a href="#">NPR</a>	IY	<a href="#">151-9266</a>	02	001	HARNESS AS-SENSOR
	<a href="#">NPR</a>	IY	<a href="#">155-1701</a>	00	008	MOUNTING GP-POWER MODULE

	<a href="#">NPR</a>	IY	<a href="#">161-2491</a>	00	001	RAIL GP-ENGINE SUPPORT
		I	194-9381	00	001	PANEL AR
	<a href="#">NPR</a>	IL	121-6202	06	001	REGULATOR GP-VOLTAGE
	<a href="#">NPR</a>	ILY	<a href="#">115-7182</a>	01	001	RAIL GP-ENGINE SUPPORT
	<a href="#">NPR</a>	ILY	<a href="#">6I-1044</a>	07	001	MOUNTING GP-JACKET WTR HEATER
		I	0V-1093		001	QUOTE NO.
		I	5N-9955		001	VOLTAGE IDENTIFICATION EPG/
		I	LA3291	02	001	ENGINE AR-3516B-DITA-PKG GEN
	<a href="#">NPR</a>	IY	<a href="#">173-6942</a>	00	001	ENGINE AR
		I	3L-0414		001	SINGLE BEARING GEN ALIGN-3500
		I	3L-0456		001	PROCEDURE - DVR PROG AND TEST
	<a href="#">NPR</a>	IY	<a href="#">5N-2438</a>	05	001	LINES GP-FLEXIBLE FUEL
		I	5P-2506	00	001	LITERATURE GP
	<a href="#">NPR</a>	IY	<a href="#">7C-0527</a>	02	001	STARTING MOTOR GP-ELECTRIC
	<a href="#">NPR</a>	IY	<a href="#">7N-6782</a>	08	001	INDICATOR GP-AIR FILTER CHANGE
	<a href="#">NPR</a>	IY	<a href="#">8N-9639</a>	04	001	GUARD GP-DAMPER
	<a href="#">NPR</a>	IY	<a href="#">113-1581</a>	00	001	AIR CLEANER GP
	<a href="#">NPR</a>	IY	<a href="#">115-3613</a>	01	001	MOUNTING GP-AIR CLEANER
	<a href="#">NPR</a>	IY	<a href="#">116-7004</a>	02	001	REGULATOR GP-TEMPERATURE
	<a href="#">NPR</a>	IY	<a href="#">121-8856</a>	06	001	CONNECTION GP-ELECTRICAL
	<a href="#">NPR</a>	IY	<a href="#">134-0061</a>	04	001	WIRING GP-ENGINE
	<a href="#">NPR</a>	I	141-1809	01	001	BOX GP-GENERATOR CONNECTION
	<a href="#">NPR</a>	I	144-1952	01	001	GENERATOR AR
	<a href="#">NPR</a>	I	145-5138	00	001	WIRING GP-ELECTRONIC CONTROL
	<a href="#">NPR</a>	I	153-0191	03	001	INSTALLATION AR-GENERATOR
		I	5N-9635		001	CONVENIENCE NUM
	<a href="#">NPR</a>	IY	<a href="#">163-1462</a>	00	001	SENSOR & MTG GP-ELECTRIC
		I	LA3326	00	001	RADIATOR REMOVAL AR
		I	LA1077	04	001	SWITCHGEAR CONVERSION
	<a href="#">NPR</a>	IY	<a href="#">145-2911</a>	05	001	BOX GP-CONTROL PANEL
		I	LA1188	05	001	CHARGING ALTERNATOR 24V 60 AMP
	<a href="#">NPR</a>	IY	<a href="#">7E-2858</a>	00	001	ALTERNATOR GP-CHARGING
	<a href="#">NPR</a>	IY	<a href="#">7E-4836</a>	05	001	MOUNTING GP-ALTERNATOR
	<a href="#">NPR</a>	IY	<a href="#">7W-5780</a>	04	001	GUARD GP-BELT
	<a href="#">NPR</a>	IY	<a href="#">107-7361</a>	01	001	DRIVE GP-ACCESSORY
		I	PA4355	05	001	JACKET WATER HEATER - DUAL

	<a href="#">NPR</a>	IY	<a href="#">7E-6247</a>	03	001	HEATER GP-JACKET WATER
	<a href="#">NPR</a>	IY	<a href="#">4P-7072</a>	00	001	CONNECTION GP-WATER
		I	PA5313	05	001	LUBRICATING OIL
	<a href="#">NPR</a>	I	5P-2586	03	001	OIL
		I	0P-1578		001	PRIME PLUS 10% RATING-3500
		I	5N-9597		001	VOLTAGE INDICATOR 480V, 60HZ
		I	LL5192	01	001	2628 BHP 1825 GEN KW W/F 60 HZ
		I	0K-2142	00	001	1960 KW @ 1800 RPM (2628 BHP)
		I	0V-1184		001	0V1184 ALL DLRS FC-C029
		I	0P-8708		001	POWER PLUS RENTL FINANCE PRGM
		I	0V-1213		001	01JUL00 PRC PROTPGM641-10
						<b>SHIPPED LOOSE</b>
	<a href="#">NPR</a>	S	3N-6504		001	HOSE AS
	<a href="#">NPR</a>	S	5F-5990		002	CLIP
	<a href="#">NPR</a>	S	8N-1186		001	HOSE AS
	<a href="#">NPR</a>	S	171-6719		001	KIT-PARTS
	<a href="#">NPR</a>	SY	<a href="#">171-6721</a>		001	KIT-PARTS
		S	JERC2162		001	SOFT
		S	LERX5100		001	SOFT
		S	SEBP2414		001	PTSBK
		S	SEBP2416		001	PTSBK
		S	SEBU6042		001	SUPP
		S	SEBU6251		001	LUBE
		S	SEBU6916		001	OMM
		S	SEBU6918		001	OMM
		S	SEBU6984		001	SUPP
		S	SELF5308		001	WARRANTY
		S	SELS0086		001	S.I.
		S	SENR4794		001	SCHEMATIC
		S	SMBU6981		001	SUPP
		S	ESO		001	(PRNT ESO COPY)
		S	PML		001	*REQUIRED DECALS