

3516B Generator Set

Machine Serial Number - FDN00895

Machine Build Date - 2002/06/23

Engine Serial Number - 1HZ02145

Engine Build Date - 2002/06/11

Product - Entire Group (FDN00895)

| Part Number | Serial Number | Part Name |
|-----------------|---------------|---------------------|
| <u>198-1090</u> | | General AR |
| 121-4713 | | Instructions |
| <u>131-1961</u> | | Panel GP-Instrument |
| <u>7W-0825</u> | | Cable GP-Battery |
| <u>7L-7872</u> | | Battery GP |
| <u>3N-7056</u> | | Support GP-Battery |
| 1000 | 1HZ02145 | Engine |
| 1404 | 4GN00895 | Generator |

Engine - Entire Group (1HZ02145)

| Part Number | Change Level | Part Name |
|---------------------|--------------|----------------------------|
| <u>131-1961</u> | 02 | Panel GP-Instrument |
| <u>3N-7056</u> | 00 | Support GP-Battery |
| <u>7L-7872</u> | 08 | Battery GP |
| <u>7W-0825</u> | 01 | Cable GP-Battery |
| <u>198-1090</u> | 00 | General AR |
| <u>5N-2438</u> | 05 | Lines GP-Flexible Fuel |
| <u>7N-6782</u> | 08 | Indicator GP-Air Filter Ch |
| <u>9Y-5563</u> | 02 | Fumes Disposal GP |
| <u>104-4704</u> | 03 | Mounting GP-Control Par |
| <u>108-5555</u> | 04 | Switch GP-Disconnect |
| <u>115-3613</u> | 05 | Mounting GP-Air Cleaner |
| <u>120-9110</u> | 05 | Radiator & Fan GP |
| <u>120-9818</u> | 05 | Fumes Disposal GP |
| <u>121-8856</u> | 07 | Connection GP-Electrical |
| <u>141-1809</u> | 03 | Box GP-Generator Conn |
| <u>145-5138</u> | 01 | Wiring GP-Electronic Cor |
| <u>147-3738</u> | 00 | Valve GP-Fluid Sampling |
| <u>151-9228</u> | 02 | Guard GP-Belt |
| <u>187-6151</u> | 03 | Harness AS-Sensor |

| Part Number | Change Level | Part Name |
|-----------------|--------------|---------------------------|
| <u>187-6307</u> | 08 | Panel GP-Control |
| <u>195-5874</u> | 03 | Engine AR |
| <u>197-9052</u> | 00 | Guard GP-Damper |
| <u>198-5460</u> | 04 | Wiring GP-Panel |
| <u>121-3356</u> | 03 | Sensor & Mtg GP-Radiat |
| <u>113-1581</u> | 00 | Air Cleaner GP |
| <u>201-0549</u> | 03 | Drain GP-Engine Oil |
| <u>115-1063</u> | 02 | Pump GP-Fuel Priming |
| <u>3N-7056</u> | 00 | Support GP-Battery |
| <u>7W-0825</u> | 01 | Cable GP-Battery |
| <u>205-7860</u> | 01 | Film GP |
| <u>104-6203</u> | 08 | Installation AR-Generator |
| <u>144-1828</u> | 03 | Generator AR |
| <u>153-1031</u> | 03 | Rail GP-Engine & Gen St |
| <u>9Y-6496</u> | 02 | Module GP-Interface |
| <u>134-1157</u> | 01 | Relay GP |
| <u>187-9371</u> | 03 | Module GP-Alarm |
| <u>131-1961</u> | 02 | Panel GP-Instrument |
| <u>131-1965</u> | 02 | Panel GP-Instrument |
| <u>121-2479</u> | 02 | Switch GP-Coolant Level |
| <u>8N-6435</u> | 02 | Filter GP-Primary Fuel |
| <u>4P-7380</u> | 02 | Separator GP-Water |
| <u>122-0335</u> | 03 | Relay GP |
| <u>121-6203</u> | 06 | Regulator GP-Voltage |
| <u>8N-3896</u> | 13 | Starting Motor GP-Electri |
| <u>7L-7872</u> | 08 | Battery GP |
| <u>7E-6247</u> | 03 | Heater GP-Jacket Water |
| <u>134-3160</u> | 05 | Mounting GP-Jacket Wtr |

| Part Number | Change Level | Part Name |
|----------------------|---------------------|--------------------------|
| <u>166-6652</u> I | 04 | Mounting GP-Jacket Wtr |
| <u>5N-4659</u> I | 07 | Regulator GP-Oil Level |
| <u>122-0317</u> I | 02 | Panel AS-Box |
| <u>122-0319</u> I | 04 | Mounting GP-Circuit Brea |
| <u>122-0320</u> I | 02 | Wiring GP-Generator |
| <u>122-0329</u> I | 02 | Connection GP-Terminal |
| <u>207-1740</u> I | 00 | Circuit Breaker GP |
| <u>208-1195</u> I | 00 | Mounting GP-Circuit Brea |
| I - Installed | | |