

G3516 Gas Engine

Engine Serial Number - 4EK01466

Engine Build Date - 1997/08/07

Engine - Entire Group (4EK01466)

Part Number	Change Level	Part Name
<u>128-3490</u> 	03	Engine AR
<u>4P-9088</u> 	02	Air Cleaner GP
<u>4P-9597</u> 	01	Indicator GP-Air Filter Ch
<u>4W-4755</u> 	02	Switch GP-Magnetic
<u>6I-1043</u> 	01	Mounting GP-Jacket Wtr
<u>6I-1044</u> 	04	Mounting GP-Jacket Wtr
<u>7E-6248</u> 	05	Heater GP-Jacket Water
<u>7W-6555</u> 	01	Housing & Regulator GP
<u>7W-8708</u> 	00	Installation AR-Generator
<u>8N-3896</u> 	13	Starting Motor GP-Electri
<u>8N-9639</u> 	04	Guard GP-Damper
<u>109-7034</u> 	01	Control GP-Jacket Water
<u>116-9881</u> 	00	Rail GP-Engine Support
<u>142-0005</u> 	00	Lines GP-Engine Oil Drai
<u>141-4987</u> 	01	Cover GP-Generator
<u>7L-7871</u> 	08	Battery GP
<u>7W-0825</u> 	01	Cable GP-Battery
<u>3N-7056</u> 	00	Support GP-Battery
<u>110-6206</u> 	00	Drain GP-Engine Oil
<u>4P-9566</u> 	09	Panel GP-Control
<u>118-0474</u> 	04	Harness AS-Panel
<u>108-4886</u> 	04	Actuator GP-Governor
<u>4P-8890</u> 	01	Control GP-Engine Electr
<u>4P-7489</u> 	12	Ignition GP-Gas Engine
<u>9Y-6496</u> 	02	Module GP-Interface

Part Number	Change Level	Part Name
<u>107-9020</u> I	02	Meter GP-Service
<u>107-9023</u> I	01	Gauge AS-Pressure
<u>107-9024</u> I	01	Gauge GP-Coolant Temp
<u>107-9026</u> I	01	Gauge AS-Pressure
<u>107-9022</u> I	02	Pyrometer GP
<u>108-3921</u> I	02	Gauge GP-Air Inlet Temp
<u>107-9025</u> I	01	Gauge GP-Manifold Pres
<u>4P-9596</u> I	04	Valve GP-Solenoid
<u>104-4704</u> I, L	03	Mounting GP-Control Par
<u>129-5684</u> I, L	01	Wiring GP-Engine
<u>121-8855</u> I, L	02	Connection GP-Electrical
<u>136-6924</u> I, L	01	Panel GP-Control
<u>133-5095</u> I, L	01	Actuator GP-Electronic
<u>126-5667</u> I, L	04	Ignition GP-Gas Engine
<u>126-5668</u> I	00	Control GP-Engine Electr
<u>127-9317</u> I, L	01	Valve GP-Solenoid
<u>4P-7610</u> I, L	02	Sensor GP-Speed
<u>144-9058</u> I, L	00	Transformer GP-Current
I - Installed		
L - Less Indicator		