

PM3516 Power Module

Machine Serial Number - BPD01060
Machine Build Date - 2003/12/18

Engine Serial Number - 1HZ02469
Engine Build Date -

Product - Entire Group (BPD01060)

Part Number	Serial Number	Part Name
<u>188-7945</u>		General AR
3L-0456		Procedure - Dvr Prog And Test
<u>134-3160</u>		Mounting GP-Jacket Wtr Heater
194-2036		Control GP-Electronic
<u>235-1221</u>		Mounting GP-Jacket Wtr Heater
<u>236-8821</u>		Connection GP-Water
<u>7E-6247</u>		Heater GP-Jacket Water
199-9109		Film GP
<u>197-7161</u>		Panel AR-Switchgear
205-8203		Unknown Part
246-1111		Panel GP
3L-0414		Instructions
121-4713		Instructions
<u>161-2491</u>		Rail GP-Engine Support
183-8051		Panel GP-Electronic
212-1303		Unknown Part
<u>129-3164</u>		Enclosure GP-Extension
<u>134-3159</u>		Mounting GP-Jacket Wtr Heater
<u>153-0191</u>		Installation AR-Generator
<u>221-0752</u>		Relay GP
<u>224-1196</u>		Ladder GP
<u>178-3323</u>		Battery GP
183-8050		Panel GP-Control
<u>248-5730</u>		Connection GP-Generator Leads
3L-0467		Two Bearing Gen ALIGNMENT-3500
<u>151-5714</u>		Ladder GP
<u>166-7142</u>		Installation AR-Generator
205-0814		Film GP
<u>208-0387</u>		Conduit GP-Electrical
<u>237-1971</u>		Contacto GP-Generator
<u>239-8008</u>		Lines GP-Fuel
245-9477		Unknown Part
245-9476		Radiator GP
<u>163-4757</u>		Cooler GP-Fuel
<u>190-9766</u>		Rail GP
<u>206-7055</u>		Connection GP-Generator Leads
<u>215-2411</u>		Cooling AR
<u>235-1224</u>		Heater GP-Jacket Water
<u>249-2459</u>		Conduit GP-Electrical
1000	1HZ02469	Engine
1404	7TN01338	Generator

Engine - Entire Group (1HZ02469)

Part Number	Change Level	Part Name
<u>7E-6247</u>	F	Heater GP-Jacket Water

Part Number I, L	Change Level	Part Name
<u>178-3323</u> I	F	Battery GP
<u>134-3160</u> I, L	F	Mounting GP-Jacket Wtr Heater
<u>235-1224</u> I	F	Heater GP-Jacket Water
<u>129-3164</u> I, L	F	Enclosure GP-Extension
<u>197-7161</u> I	F	Panel AR-Switchgear
<u>151-5714</u> I	F	Ladder GP
<u>215-2411</u> I, L	F	Cooling AR
<u>245-7663</u> I	F	General AR
<u>188-9442</u> I, L	F	Engine AR
<u>206-7055</u> I, L	F	Connection GP-Generator Leads
<u>249-2459</u> I	F	Conduit GP-Electrical
<u>144-1952</u> I, L	01	Generator AR
<u>239-8008</u> I	00	Lines GP-Fuel
<u>166-7142</u> I	04	Installation AR-Generator
<u>190-9766</u> I	02	Rail GP
<u>153-0191</u> I, L	06	Installation AR-Generator
<u>161-2491</u> I, L	03	Rail GP-Engine Support
<u>134-3159</u> I, L	06	Mounting GP-Jacket Wtr Heater
<u>235-1221</u> I	01	Mounting GP-Jacket Wtr Heater
<u>236-8821</u> I	00	Connection GP-Water
<u>237-1971</u> I	01	Contactor GP-Generator
<u>224-1196</u> I, L	01	Ladder GP
<u>188-7945</u> I, L	00	General AR
<u>237-0915</u> I	02	Engine AR
<u>221-0752</u> I	00	Relay GP
<u>248-5730</u> I	00	Connection GP-Generator Leads
<u>208-0387</u> I, L	04	Conduit GP-Electrical

I - Installed
L - Less Indicator