

C15 Generator Set

Machine Serial Number - C5E02407

Machine Build Date - 07/04/2009

Engine Serial Number - FSE02867

Engine Build Date - 06/12/2009

Product - Entire Group (C5E02407)

Part Number	Serial Number	Part Name	Install Ind.	Install Date	Description
287-3369		General AR-Genset	Factory	12/31/1	
253-3028		Connection GP-Generator Leads	Factory	12/31/1	NEUTRAL GND CONNECTION
5N-9635		Convenience Num	Factory	12/31/1	
1000	FSE02867	Engine	Factory	12/31/1	ENGINE
1404	G6B16104	Generator	Factory	12/31/1	GENERATOR

Engine - Entire Group (FSE02867)

Part Number	Change Level	Part Name	Install Ind.	Install Date
287-3369		General AR-Genset (I)	—	—
286-4922	07	Engine AR-Complete (I)	—	—
235-1203	00	Generator AR (I)	—	—
233-9391		Air Cleaner GP (I)	—	—
260-4784		Radiator GP (I)	—	—
218-4698		Fan GP-Blower (I)	—	—
264-0255		Lines GP-Coolant Drain (I)	—	—
287-4962		Lines GP-Fuel (I)	—	—
233-9351		Coupling GP-Generator (I)	—	—

Part Number	Change Level	Part Name	Install Ind.	Install Date
270-3125		Battery GP (I)	—	—
144-7184	02	Cover GP-Engine Lifting Eye (I)	—	—
251-1413		Fastener GP-Panel (I)	—	—
264-0256		Drain GP-Oil (I)	—	—
263-5120		Fumes Disposal GP (I)	—	—
261-8429		Potentiometer AS (I)	—	—
261-5613		Harness AS-Power (I)	—	—
258-6763		Enclosure AS (I)	—	—
258-6791		Panel GP-Electronic (I)	—	—
258-6790		Mounting GP-Bus Bar (I)	—	—
258-6782		Door GP (I)	—	—
258-6776		Mounting GP-Divider Plate (I)	—	—
258-6773		Mounting GP-Bracket (I)	—	—
240-0170		Box GP-Connection (I)	—	—
266-7116		Harness AS-Engine (I)	—	—
240-1622		Cable GP (I)	—	—
262-9635		Mounting GP-Wiring (I)	—	—

Part Number	Change Level	Part Name	Install Ind.	Install Date
266-2701		Cover GP-Control Panel (I)	—	—
268-8667		Plug GP-Box (I)	—	—
205-7860	10	Film GP (I)	—	—
253-3023		Fastener GP-Instrument Panel (I)	—	—
239-6758		Mounting GP-Control Panel (I)	—	—
239-0410		Transformer GP-Current (I)	—	—
240-1621		Wiring GP-Generator (I)	—	—
286-8875		Fastener GP-Wiring Harness (I)	—	—
261-5132		Control GP-Generator Set (I)	—	—
239-3812		Duct GP-Cable (I)	—	—
246-5891		Connection GP-Generator Leads (I)	—	—
266-1425		Mounting GP-Control Panel (I)	—	—
292-5967		Panel GP-Electrical (I)	—	—
261-7127		Door GP (I)	—	—
261-5828		Relay GP (I)	—	—
261-6623		Panel GP-Electrical (I)	—	—

Part Number	Change Level	Part Name	Install Ind.	Install Date
261-8479		Wiring GP-Generator (I)	—	—
258-6778		Panel GP-Electronic (I)	—	—
258-6795		Mounting GP-Terminal Strip (I)	—	—
275-2218		Enclosure GP-Generator (I)	—	—
275-8628		Film GP (I)	—	—
241-3092		Seal GP-Enclosure (I)	—	—
241-6058		Insulation GP-Weather (I)	—	—
266-1422		Cover GP-Control Panel (I)	—	—
261-7645		Cover GP-Control Panel (I)	—	—
282-6303		Insulation GP-Generator (I)	—	—
286-2426	02	Film GP (I)	—	—
237-7177		Base GP-Engine & Generator (I)	—	—
270-0171		Support GP-Battery (I)	—	—
263-9346		Mounting GP-Engine & Generator (I)	—	—
235-4480		Extension GP-Base (I)	—	—
282-6288		Cover GP-Base (I)	—	—
282-6287		Cover GP-Access (I)	—	—

Part Number	Change Level	Part Name	Install Ind.	Install Date
240-6068		Cover GP-Generator (I)	—	—
261-8426		Converter GP-Electrical (I)	—	—
261-8464		Potentiometer AS (I)	—	—
247-2701		Mounting GP-Electronic Control (I)	—	—
239-9373		Mounting GP-Generator (I)	—	—
118-4304	01	Battery Charger (I)	—	—
268-2649		Mounting GP-Battery Charger (I)	—	—
193-3260	04	Harness AS-Wiring (I)	—	—
261-7137		Contactora GP (I)	—	—
196-2236	03	Heater GP-Jacket Water (I)	—	—
183-2899		Harness AS-Wiring (I)	—	—
295-2249		Mounting GP-Jacket Wtr Heater (I)	—	—
282-9957		Circuit Breaker GP (I)	—	—
243-3540		Circuit Breaker GP (I)	—	—
258-6812		Cover GP-Enclosure (I)	—	—
243-5599		Cover GP-Access (I)	—	—
260-0568		Bracket GP-Mounting (I)	—	—

Part Number	Change Level	Part Name	Install Ind.	Install Date
277-3571		Seal GP-Enclosure I	—	—
284-9190		Terminal GP-Circuit Breaker I	—	—
295-2373		Connection GP-Terminal Strip I	—	—
143-7886	00	Switch AS I	—	—
237-8962		Harness AS-Wiring I	—	—
243-4797		Shunt-Trip I	—	—
C5E02407			—	—
G6B16104			—	—
6L-4502				