

**3412C Generator Set**

Machine Serial Number - 9EP01028

Machine Build Date - 2001/07/18

**3412C Engine - Machine**

Engine Serial Number - 3FZ02576

Engine Build Date - 2001/06/15

**Product - Entire Group (9EP01028)**

Part Number	Serial Number	Part Name
<a href="#">167-6897</a>		General AR
1000	3FZ02576	Engine
1404	AER00119	Generator

**Engine - Entire Group (3FZ02576)**

Part Number	Change Level	Part Name
<a href="#">167-6897</a> 	00	General AR
<a href="#">166-8590</a> 	02	Engine AR
<a href="#">3N-8594</a> 	03	Cover GP-Engine Lifting Eye
<a href="#">6N-8878</a> 	02	Gauge GP-Fuel Pressure
<a href="#">142-6947</a> 	04	Sensor GP-Coolant Level
<a href="#">149-7876</a> 	03	Fastener GP-Generator Coupling
<a href="#">151-7794</a> 	03	Mounting GP-Engine Flexible
<a href="#">155-6256</a> 	00	Control GP-Governor
<a href="#">168-3241</a> 	05	Enclosure GP-Generator
<a href="#">168-3293</a> 	02	Air Cleaner GP
<a href="#">169-0226</a> 	03	Box GP-Junction
<a href="#">169-0247</a>	07	Box GP-Extension Terminal

Part Number	Change Level	Part Name
<a href="#">169-2054</a>	07	Radiator & Fan GP
<a href="#">169-4439</a>	04	Harness AS-Wiring
<a href="#">169-4441</a>	05	Harness AS-Wiring
<a href="#">169-4444</a>	04	Harness AS-Wiring
<a href="#">169-4450</a>	03	Harness AS-Wiring
<a href="#">180-3986</a>	02	Mounting GP-Junction Box
<a href="#">156-0040</a>	00	Transformer GP-Current
<a href="#">188-8215</a>	01	Guard GP-Belt
<a href="#">196-8775</a>	01	Switch GP-Disconnect
<a href="#">136-6616</a>	00	Generator AR
<a href="#">153-3441</a>	03	Sensor GP-Engine
<a href="#">169-0200</a>	08	Panel GP-Electronic
<a href="#">171-6833</a>	03	Relay GP
<a href="#">193-3247</a>	02	Harness AS-Wiring
<a href="#">166-0857</a>	03	Fumes Disposal GP
<a href="#">190-2399</a>	03	Enclosure GP-Generator
<a href="#">168-3245</a>	01	Lines GP-Engine Oil Drain
<a href="#">168-3252</a>	02	Lines GP-Coolant Drain
<a href="#">169-2069</a>	01	Lines GP-Flexible Fuel

Part Number	Change Level	Part Name
<a href="#">170-8402</a> I	02	Base GP-Engine & Generator
<a href="#">198-8793</a> I	00	Support GP-Battery
<a href="#">188-3857</a> I	01	Extension GP-Fuel Tank
<a href="#">143-9519</a> I	04	Regulator GP-Voltage
<a href="#">155-8893</a> I	01	Wiring GP-Generator
<a href="#">193-3262</a> I	01	Harness AS-Wiring
<a href="#">204-2515</a> I	00	Wiring GP-Generator
<a href="#">169-2106</a> I	03	Cover GP-Access
<a href="#">203-7165</a> I	00	Connection GP-Generator Leads
<a href="#">157-3540</a> I	00	Module GP-System Communication
<a href="#">190-2565</a> I	02	Harness AS-Wiring
<a href="#">200-0844</a> I	01	Relay GP
<a href="#">190-2566</a> I	02	Harness AS-Wiring
<a href="#">200-0842</a> I	01	Relay GP
<a href="#">171-6828</a> I	02	Module GP-Interface
<a href="#">171-6843</a> I	03	Module GP-Alarm
<a href="#">171-6827</a> I	03	Panel GP-Instrument
<a href="#">171-6831</a> I	04	Relay GP
<a href="#">168-3238</a> I	02	Heater GP-Jacket Water

Part Number	Change Level	Part Name
<a href="#">171-6841</a> I	03	Connection GP-Electrical
<a href="#">111-6138</a> I	02	Battery Charger
<a href="#">171-6844</a> I	04	Connection GP-Electrical
<a href="#">184-7040</a> I	01	Mounting GP-Battery Charger
<a href="#">7L-7872</a> I	08	Battery GP
<a href="#">184-7031</a> I	02	Contactator GP
<a href="#">169-0237</a> I	03	Cover GP-Generator
<a href="#">169-4524</a> I	05	Mounting GP-Circuit Breaker
<a href="#">183-2490</a> I	01	Circuit Breaker GP
<a href="#">184-7038</a> I	01	Wiring GP-Panel
<a href="#">189-8891</a> I	01	Connection GP-Generator Leads
<a href="#">201-2675</a> I	00	Guard GP-Engine
<b>I - Installed</b>		